

CANDY mosogatókosár görgő

Bauknecht:

GCF3080
GCI4861IN
GCIK70102IN
GCIP71102A+IN
GCX4861
GCX5929/1
GCXP71102A+
GCXP7240
GSFP71102A+W
GSFS70102WS

Candy:

CDI45 (32900048)
CDI4580 (32900049)
CDI50 (32900116)
CED1101S (32000515)
CED11037S (32000303)
CS455M (32000070)
CS455MS (32000242)
CSF4548X (32000555)
CSF455047 (32000489)
CSF456M (32000148)
CSF4570E (32000314)
CSF4570EX (32000315)
CSF4575E (32000488)
CSF4575EX (32000487)
CSF457E (32000261)
CSF457EX (32000270)
CSF458E (32000147)
CSF459E (32000260)

ECG:

EDS6025

Fagor:

2LF-454 (926010521)
2LF-454X (926010530)
2LF-456 ((926010549)
LJ-043 (926110192)
LJ-043X (926110209)
LJ-044 (926010017)
LJ-044X (926010018)
LJ-054 (926110218)
LJ-054X (926110245)
LJ-064 (926110227)
LJ-064X (926110236)
LJF-0210 ((926110129)
LJF-0310 (926110183)

LV-056C (926010003)
Hoover:
HDS555M80 (32000170)
HDS556MS80 (32000235)
HDS955E80 (32000174)
HEDS100ES (32000735)
HED60186 HOD60
(32000513)

Hyundai, Goddess:

DFA1267DX7

Ignis:

ADL155
ADL456

Rosieres:

LVI949 (32900050)

Whirlpool:

ADG100A+
ADG1077
ADG110A+
ADG120A+
ADG145
ADG150IX
ADG155
ADG165
ADG170
ADG175
ADG175/1
ADG185
ADG190A+
ADG195A+
ADG205A+
ADG4551IX
ADG4551NB
ADG4551WH
ADG455IX
ADG555IX
ADG555NB
ADG555WH
ADG560IX
ADG7500/2
ADG750IX
ADG750WH
ADG760IX
ADG850IX

ADG910FD
ADG910SL
ADGI792FD
ADGI992FD
ADP1073IX
ADP1073WH
ADP1077IX
ADP1077WH
ADP450IX
ADP450WH
ADP451/1IX
ADP451/1WH
ADP451IX
ADP451WH
ADP490IX
ADP490WH
ADP550IX
ADP550WH
ADP560A+WH
ADP590IX
ADP590WH
ADP650IX
ADP650WH
ADP690IX
ADP750IX
ADP750WH
ADP760A+IX
ADP790IX
ADP790WH
ADP850A+IX
ADP850A+WH
ADP974A+IX
ADP974A+WH
ADPF1000

Zerowatt:

ZDW60 (32000243)